① ② ③

Fastening of top track
(countersink holes to prevent protrusion of screw head)

Important dimension

26
23

Positioner for top carriage FIX

Door filling: 18 mm board

Door filling: 12 mm board + mirror 4 mm

Max. weight of 50 kg per door

Installation of bottom track Gemini-Decor II using our mounting bush

25

18

K   L

ATTENTION
When installing the fixed mounting, it is important to situate axis L parallel to axis K (L ll K)

up to 7 mm

15
60

Milled pocket

hole depth 5 mm

53
Ø10
45
12
Ø40

Milled pocket

Ø10
32
11
40
33

ATTENTION:
For fast and accurate routing of the bottom carriage pockets we recommend using stencil for bottom carriage WD18 HI-TEC
index 20191

Installation of bottom track using screws (countersink the openings)

Option: bottom track ELEGANT II

With **ALFA, FAWORYT and VICTORIA** sets you may use bottom track **Elegant II with covering strip** along with bottom carriage WD 18V HI-TEC. **Fitting measurements are not affected.**

Bottom carriage WD18V HI-TEC

Fastening of bottom track (special screw)

Stopper **HI-TEC**

COMPONENTS

Handle
L: 2.70 m
ALFA II C   FAWORYT II C   VICTORIA II C

Top track Gemini-Decor
L: 1.70 m, 2.35 m, 3.00 m, 4.05 m, 6.00 m
76 mm

Bottom track Gemini-Decor II
L: 1.70 m, 2.35 m, 3.00 m, 4.05 m, 6.00 m
53 mm

Guiding carriage Focus

Angle section
Mini 11 mm x 17 mm L: 1.70 m, 2.35 m, 3.00 m *Alfa, Faworyt*
K2-Decor L: 1.70 m, 2.35 m, 3.00 m *Victoria*

Bottom carriage WD18C HI-TEC

Dimensions of opening
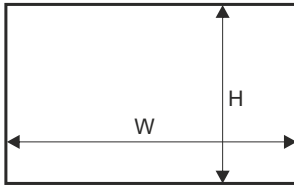
Handle length = door height		
ALFA II C **VICTORIA II C**		**FAWORYT II C**

anti-dust brush (self-adhesive) 6.7 mm x 13 mm
textile door stop (inserted) 4.8 mm x 4 mm
#16 / #18

	ALFA II C / VICTORIA II C		FAWORYT II C	
door height — h	$h = H - 42$ mm		$h = H - 42$ mm	
door wing height with soft-close fitted	Mini SV25/40/60 SV-25/50	$h = H - 42$ mm	Mini SV25/40/60 SV-25/50	$h = H - 42$ mm
	Top SV60/80, Central SV25/40	$h = H - 44$ mm	Top SV60/80, Central SV25/40	$h = H - 44$ mm
board height — hb	$hb = h - 2$ mm		$hb = h - 2$ mm	
door width — w	$w = (W - 3 \text{ mm} + Z) : N$		$w = (W - 3 \text{ mm} + Z) : N$	
board width **#18** — wb	$wb = w - 22$ mm		$wb = w - 19$ mm	
board width **#12** — wb_m	$wb_m = w - 7$ mm		$wb_m = w - 7$ mm	
angle section length — la	$la = dw - 48.4$ mm		$la = w - 33.6$ mm	
mirror height — hm	$hm = hb - 4$ mm		$hm = hb - 4$ mm	
mirror width — wm	$wm = wb_m - 20$ mm		$wm = wb_m - 16$ mm	

number of doors — N	2	3	4	5	2	3	4	5
total overlap — Z	36 mm	72 mm	108 mm	144 mm	18 mm	36 mm	54 mm	72 mm

visual design – 4 wings	ALFA / VICTORIA	FAWORYT
door set up	$w = (W - 3 + 108) : 4$	$w = (W - 3 + 54) : 4$
door set up	$w = (W : 2 + 33) : 2$	$w = (W : 2 + 15) : 2$

18 mm board
wb / la / w

wb_m / wm
12 mm board + # 4 mm mirror
la / w
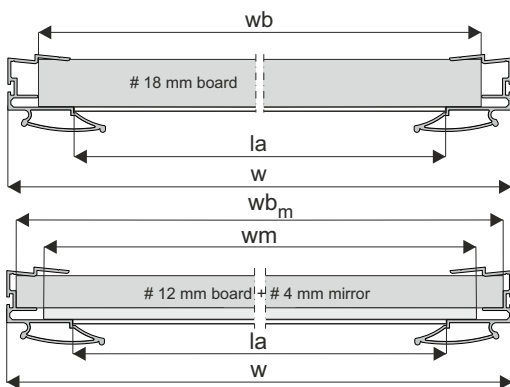
ALFA II C VICTORIA II C mirror dimensions

10 | wm | 10
1
mirror
board
hm
3
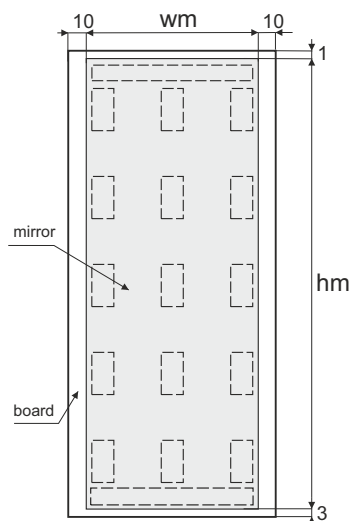
FAWORYT II C mirror dimensions

8 | wm | 8
1
mirror
board
hm
3
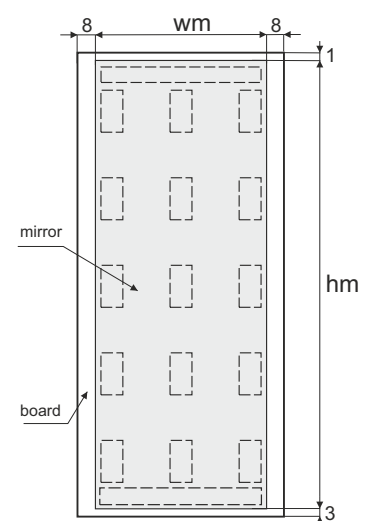
ATTENTION!
Handle profile should be 2 mm longer than board height.

WARNING

SEVROLL does not bear any responsibility for deformation resulting from the application of improper quality of boards (improper storage, improper humidity)

ATTENTION:
Board to mirror contact area should be free from dirt and grease before applying double-sided tape.

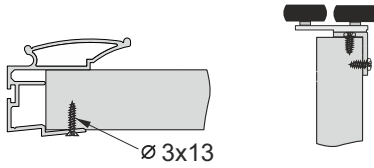Broken line indicates recommended positioning od double-sided tape

ATTENTION! Remove protective film from aluminium elements (handles, tracks, connectors, etc.) prior to cutting them to the desired size. Film removal will reveal quality issues (eg. scratches)
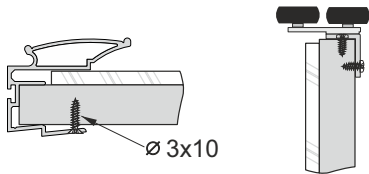
VICTORIA II C, ALFA II C

Installation method for handle and guiding carriage with # 18 mm board

ø 3x13

- When fitting handle profiles, do not use assembly adhesive
- The handle should be fixed to board with fastening screws ø**3x13** on the inner door face

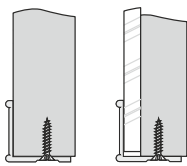**Installation method for handle and guiding carriage with # 12 mm board + # 4 mm mirror**

ø 3x10

If the board or mirror is too loose on the handle profiles, screw the handles to the board using ø3x10 screws.
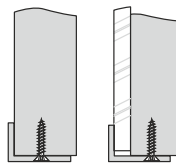
Screw are available from Sevroll-System

VICTORIA II C	ALFA II C
Installation method for angle section K2-Decor	**Installation method for angle section MINI 11x17 mm**

la

assembly adhesive
(this is necessary when using mirror)

ATTENTION!
Angle section must be fastened
to board with minimum 3 screws   3 x 25.

FAWORYT II C

Installation method for handle and guiding carriage with # 18 mm board

ø 3x13

- When fitting handle profiles, do not use assembly adhesive
- The handle should be fixed to board with fastening screws ø**3x13** on the inner door face

Installation method for handle and guiding carriage with # 12 mm board + # 4 mm mirror

ø 3x10
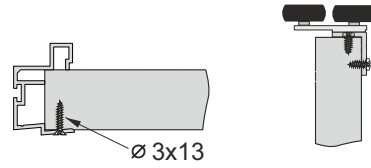
If the board or mirror is too loose on the handle profiles, screw the handles to the board using ø3x10 screws.

Screw are available from Sevroll-System

FAWORYT II C

Installation method for angle section MINI 11x17 mm

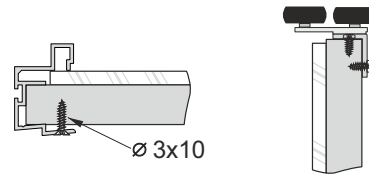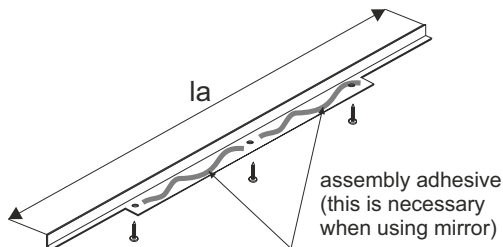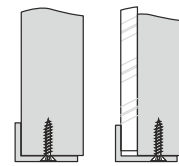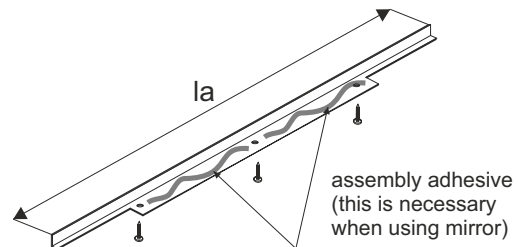

la

assembly adhesive
(this is necessary when using mirror)

ATTENTION!
Angle section must be fastened
to board with minimum 3 screws   3 x 25.